How to turn on your controller in boot mode?

Please follow this procedure on a Windows computer on which you have installed the ThrustmapperX app. You can find the link to download and install it below, in the "Software" tab:


https://support.thrustmaster.com/en/product/eswap-x-pro-controller-en/

Then, follow the steps below:

- 1) Disconnect your eSwap X PRO Controller from the computer.
- 2) Open the Firmware Updater. To open this utility software, click on the Windows logo, then in "All Programs" open the "Thrustmaster ESWAP X Gamepads" folder and then "Firmware Update":



3) Press the "MAP" button, and keep it pressed

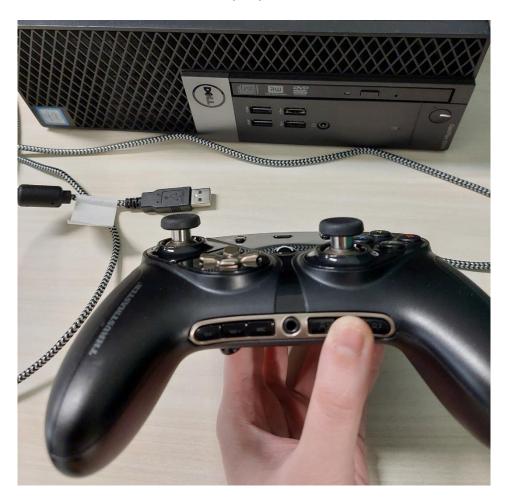

4) While maintaining this button pressed, plug your controller on one of your computer's USB.



- 5) Release the button
- 6) Your controller appears in the Firmware Updater window in boot mode. Click on "OK" to start upgrading.

